

**5/149**

**I** - Per ritardare lo spegnimento o l'accensione di un qualsiasi dispositivo.

**GB** - To delay the switch-off/on of all kinds of devices. Delaying switch-OFF and switch-ON of any kind of device.

**F** - Pour retarder l'extinction ou l'allumage de tout dispositif

**D** - Zeitgeber für das Aus- und Einschalten aller möglichen Geräte.

**E** - Para retrasar el apagado o el encendido de cualquier dispositivo.

Tempo / Time

0>9 sec.

Alimentazione / Power

12V - 3 Amperé



 **Phonocar**

Via F.lli Cervi, 167/C  
42124 Reggio Emilia (Italy)